

Part No.	Description	No. Req.*	Part No.	Description	No. Req.*
10506	Flat Pt. Set Screw (Cutter Shank to Arbor) 3/8-24 X 5/16		10686	Screw Kit for Arbor Support Bracket (Contains two-10683 and necessary washers)	
10511	Arbor Body		10687	Spacer for Arbor Support Bracket	
10512	Ejector Collar		10688	Arbor Support Bracket Kit (Contains 10675, 10687 and 10686)	
10513	Spring for 10510 Arbor		10710	Screw, #6-32 X 5/16 (For mounting switch plate).....	4
10514	Spring Seat for 10510 Arbor			(For grounding motor cord).....	2
10515	Roll Pin for 10510 Arbor		10726	Pipe Adapter Kit	
10517	Snap Ring for 10510 Arbor.....	2	10851	.500 to .750 Arbor Adapter	
10520	Arbor Spacer		10854	3/8-24 X 7/16 set screw for use with 10851 Adapter	
10521	Thrust Washer.....	2	10951	Magnet for 230V 10906	
10522	Retaining Collar		10956	Brass Wear Strips - pair (Left & Right)	
10553	Screws 1/4-20 X 7/8, Magnet to Frame..	3	10957	Steel Gib	
10555	Bushing 1-1/8 I.D. X 1-1/8 Long (control panel side)		10958	1/4-28 X 3/4 Full Dog Pt. S.S.S. (Gib to Housing).....	4
10556	Slide (Motor Mount) for 10905 and 10910		10959	Motor Slide for 10900 Drill	
10557	Rack		10960	Plunger Body for Safety Switch	
10558	Screws #10-32 X 1 Buttonhead (Slide to Rack).....	3	10961	Slide Hammer	
10560	#10 Star Washer (For slide to rack screws - external)..	3	10962	Impactor	
	(For cord clamp to housing).....	2	10964	Switch Guard	
10563	Gib Jamb Nuts, 1/4-28 (Adjusting).....	4	10966	Dust Cap for Slide Hammer	
10567	Jamb Nut, 1/2-20 (For locking Hub).....	1	10967	Microswitch Mounting Spring	
	(For locking Impactor).....	1	10968	Microswitch Adjusting Spring	
10568	Washer for Jamb Nut, 1/2 I.D. X 1-1/8 O.D. X .09		10969	Microswitch Adjusting Screw	
10569	Feed Handles.....	3	10970	Safety Switch Adjustment Bracket	
10570	Feed Handle Knobs.....	3	10971	1/4-20 X 1/2 Soc. Hd. Cap Scr. (Mount Adjusting Bracket).....	2
10572	Bronze Bushing .815 O.D. X .627 I.D. X 1.00 long		10972	#6-32 X 7/8 Button Hd. Soc. Scr. (Mount Microswitch).....	2
10576	Feed Handle Assembly (includes 5/8" dia. gear shaft)		10973	#6-32 Nylon Insert Nut.....	2
10579	Motor Top Cover		10974	Snap Ring (Plunger Assembly Retainer)	
10584	Screws, 1/4-28 X 1-1/4 (Motor to Slide)..	4	10975	Pivot Point Seal	
10585	Washers for 1/4" Screws (Motor to Slide).....	4	10976	Housing for (10900, 10905, 10910)	
10586	Cord, 3-Wire - 16-3 (Frame to Motor)		10977	1/4-20 X 1/4 Button Hd. Soc. Scr. (Adjustment Access Hole Plug)	
10588	Screw, #10 X 3/8 Self Tapping (Clamp to Frame, upper).....	2	10978	5/16-24 X 3/8 Button Hd., Soc. Scr. (Slide Hammer Retaining Scr.)	
10590	Grommet (Frame to Motor Cord Protector)		10979	Glide Post Lock Screw	
10591	Cord to Power Supply		10983	Microswitch Insulating Shield	
10592	Appleton Cord Connector		10987	Switch Assembly (230V)	
10593	Clamp (Secures motor cord to housing)		10990	Safety Microswitch Assembly	
10595	Handle Only (Optional)		10993	Safety Switch Pivot Assembly (Includes 10638, 10960, 10632)	
10596	Boss w/screws (Optional)		10994	Motor for 10906 Drill 230V 375 RPM 10 Amp.	
10618	Safety Switch Compression Spring		11050	Plugs for Pipe Adapter Mounting Holes 1/4-28 x 1/4 Soc. S.S.....	4
10632	Snap Ring for Bearing Assembly		90043	Motor Danger Tag	
10638	Safety Switch Bearing Assembly				
10644	Glide Post				
10675	Arbor Support Bracket				
10680	Arbor Bushing				
10681	Grease Zerk				
10683	1/4-20 X 2-1/2 Hex Head Bolt for Arbor Support Bracket				

*One required, except as noted.